

Change the resolution on a NUC

It is possible to modify the resolution option and refresh rate on an NUC using an USB keyboard.

- 1) Press F4 on the keyboard



- 2) Edit the parameters.

NOTE : Don't modify the 'Orientation' mode as it's usually managed through Zebrix directly.

- 3) Press Close to apply the parameters, some modifications might require a reboot.

From:

<https://documentation.zebrix.net/> - **zebrix documentation**



Permanent link:

https://documentation.zebrix.net/doku.php?id=en:resolution_nuc

Last update: **2021/08/25 10:29**