

Change the resolution on a NUC

It is possible to modify the resolution option and refresh rate on an NUC using an USB keyboard.

1. Press F4 on the keyboard



2. Edit the parameters

NOTE : Don't modify the 'Orientation' mode as it's usually managed through Zebrix directly.

3. Press Close to apply the parameters

Some modifications might require a reboot

From:

<https://documentation.zebrix.net/> - **zebrix signage documentation**

Permanent link:

https://documentation.zebrix.net/doku.php?id=en:resolution_nuc

Last update: **2025/10/15 11:46**

