

# Change the resolution on a NUC

It is possible to modify the resolution option and refresh rate on an NUC using an USB keyboard.

1) Press F4 on the keyboard



2) Edit the parameters.

NOTE : Don't modify the 'Orientation' mode as it's usually managed through Zebrix directly.

3) Press Close to apply the parameters, some modifications might require a reboot.

From:

<https://documentation.zebrix.net/> - **zebrix signage documentation**

Permanent link:

[https://documentation.zebrix.net/doku.php?id=en:resolution\\_nuc&rev=1583762241](https://documentation.zebrix.net/doku.php?id=en:resolution_nuc&rev=1583762241)

Last update: **2020/06/22 11:53**

