

# Etape 1

Allumez votre nuc.

# Etape 2

Appuyez sur la touche "F1".

# Etape 3

Modifiez l'adresse du "Zebrix server".

From:  
<https://documentation.zebrix.net/> - **zebrix documentation**

Permanent link:  
[https://documentation.zebrix.net/doku.php?id=fr:changement\\_url\\_nuc&rev=1498561035](https://documentation.zebrix.net/doku.php?id=fr:changement_url_nuc&rev=1498561035)

Last update: **2020/06/22 11:53**

