

Etape 1

Allumez votre nuc.

Etape 2

Appuyez sur la touche "F1".

Etape 3

Modifiez l'adresse du "Zebrix server".

From:
<https://documentation.zebrix.net/> - **zebrix signage documentation**

Permanent link:
https://documentation.zebrix.net/doku.php?id=fr:changement_url_nuc&rev=1498561035

Last update: **2020/06/22 11:53**

