

# Changement de l'URL sur le NUC

## Etape 1

Allumez votre nuc.

## Etape 2

Appuyez sur la touche "F1".

## Etape 3



Modifiez l'adresse du "Zebrix server".

From:  
<https://documentation.zebrix.net/> - **zebrix signage documentation**

Permanent link:  
[https://documentation.zebrix.net/doku.php?id=fr:changement\\_url\\_nuc&rev=1508933337](https://documentation.zebrix.net/doku.php?id=fr:changement_url_nuc&rev=1508933337)

Last update: **2020/06/22 11:53**

