


# Mode Kiosk de zebrix Screen Android

Tapez **5 fois sur l'Ecran** vous permet de changer de launcher par défaut

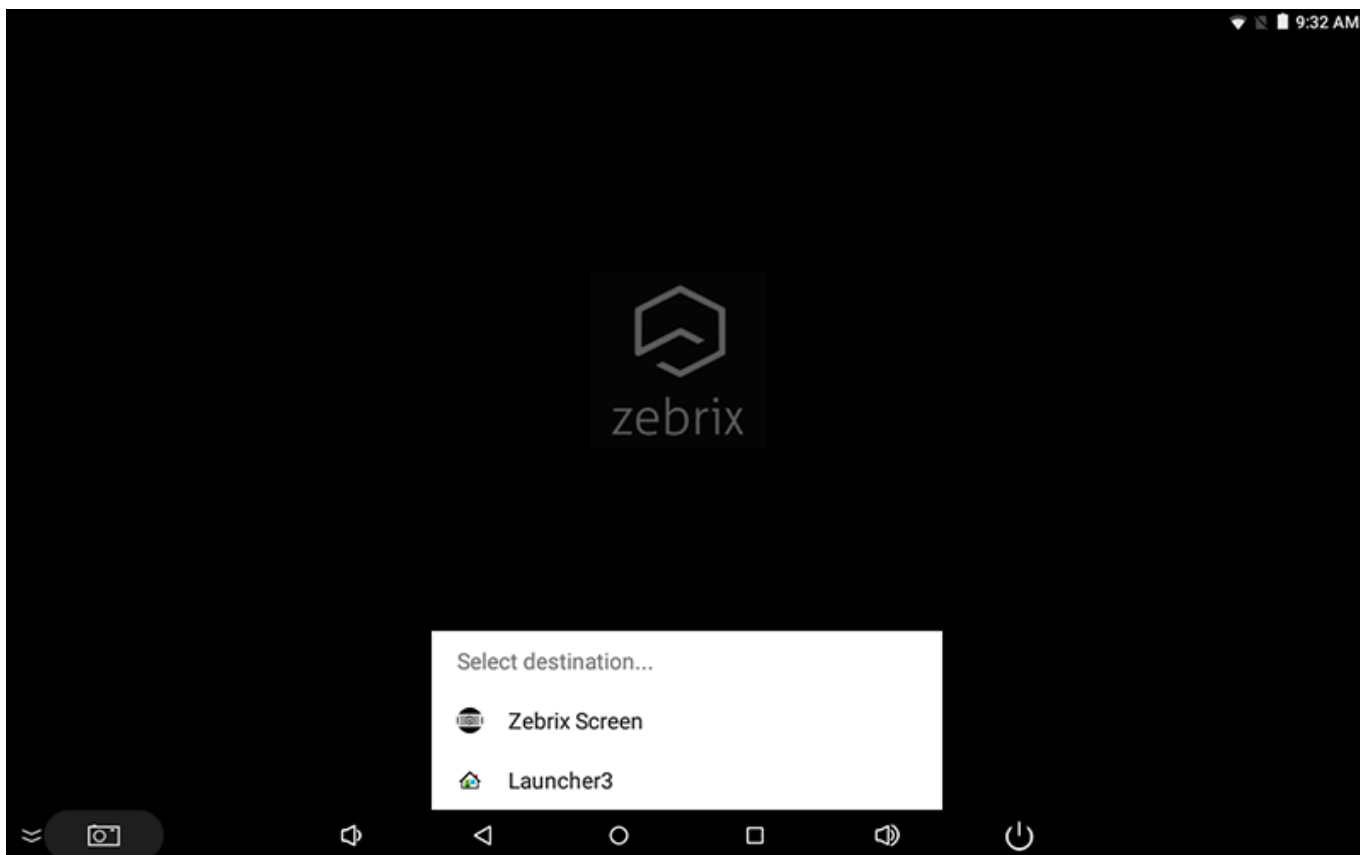

From:  
<https://documentation.zebrix.net/> - **zebrix documentation**

Permanent link:  
[https://documentation.zebrix.net/doku.php?id=fr:zebrix\\_android\\_kiosk\\_mode&rev=1611741463](https://documentation.zebrix.net/doku.php?id=fr:zebrix_android_kiosk_mode&rev=1611741463)

Last update: **2021/01/27 10:57**

