
# Activate touch mode on zebrix player

Open the Zebrix control panel by pressing “F1”.

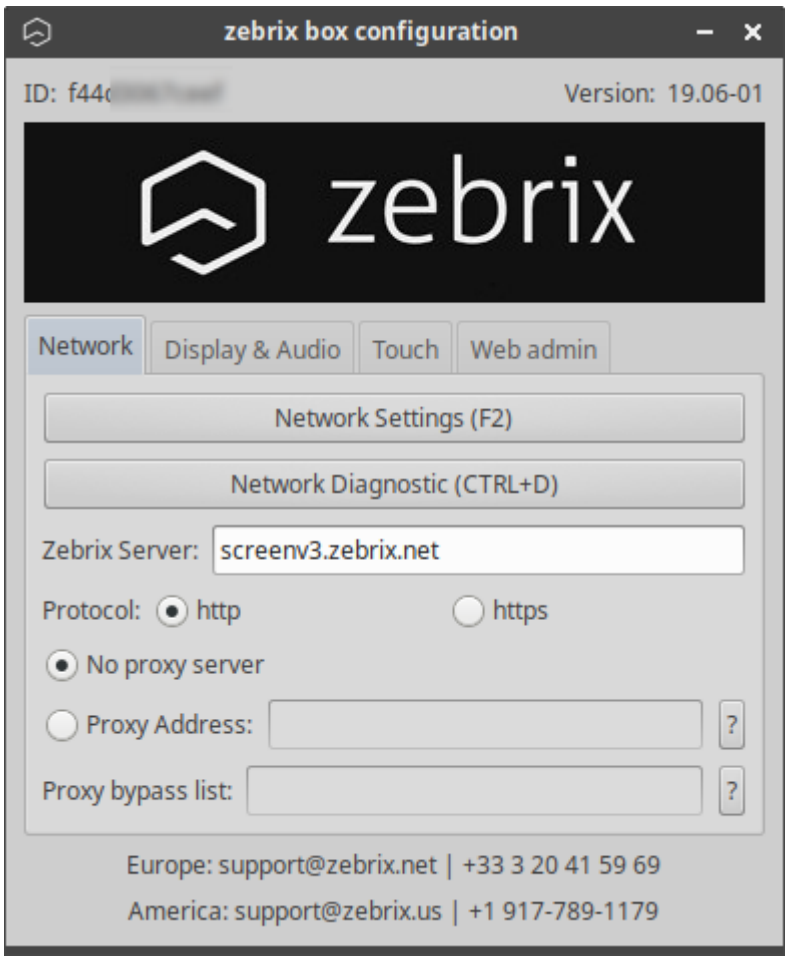


go to the “Touch” tab and tick the “Touch Screen mode” box

Touch mode is now activated.

Checking the touch configuration:**__

Open the terminal by pressing windows+T

write: export DISPLAY=:0.0

```
zebrix@zebrix-box-16b4da:~$ export DISPLAY=:0
```

Press enter, then: xinput –list

```
zebrix@zebrix-box-16b4da:~$ xinput --list
⎡ Virtual core pointer                          id=2    [master pointer  (3)]
⎜   ↳ Virtual core XTEST pointer                id=4    [slave  pointer  (2)]
⎜   ↳ Advanced Silicon S.A. SamsungUSBTouch_CAP_043     id=10   [slave  pointer  (2)]
⎣ Virtual core keyboard                         id=3    [master keyboard (2)]
    ↳ Virtual core XTEST keyboard               id=5    [slave  keyboard (3)]
    ↳ Power Button                              id=6    [slave  keyboard (3)]
    ↳ Video Bus                                 id=7    [slave  keyboard (3)]
    ↳ Power Button                              id=8    [slave  keyboard (3)]
    ↳ Sleep Button                              id=9    [slave  keyboard (3)]
    ↳ Advanced Silicon S.A. SamsungUSBTouch_CAP_043 Pen id=11   [slave  keyboard (3)]
```

A list of all pointer devices should appear, select the corresponding one and copy its full name.

Open the zebrix.conf file with the command: nano /opt/zebrix/zebrix.conf

```
zebrix@zebrix-box-16b4da:~$ nano /opt/zebrix/zebrix.conf
```

and paste the name of the device on the “TOUCHPANEL” line:

```
  GNU nano 2.9.3

ZEBRIX_SERVER="screen.zebrix.net"
RESOLUTION="auto"
HARDWAREACCELERATION="true"
PROTOCOL="http"
ORIENTATION="left"
TOUCHMODE="true"
TOUCHPANEL="Advanced Silicon S.A. SamsungUSBTouch_CAP_043"
PROXYMODE="disabled"
PROXYADDRESS=""
PROXYBYPASSLIST=""
HEARTBEAT="true"
WEBACCESS="false"
WEBAUTH="09507d770ac3eec0fla8c2968la9lcdb06ld2a760df26c373ab6el5b6l2ff43f"
OFFLINEMODE="true"
WATCHDOG_TIMER="false"
```

the Touchmode line must be set to “TRUE”.

Then press Ctrl+X to close the console. When the window asks you for confirmation, press Y to save (do not change the file name).

From:
https://documentation.zebrix.net/ - **zebrix signage documentation**

Permanent link:
**https://documentation.zebrix.net/doku.php?id=en:activer_et_configurer_le_mode_tactile**

Last update: **2025/10/29 09:52**